


# COVER STAY / SUPPORT STAY

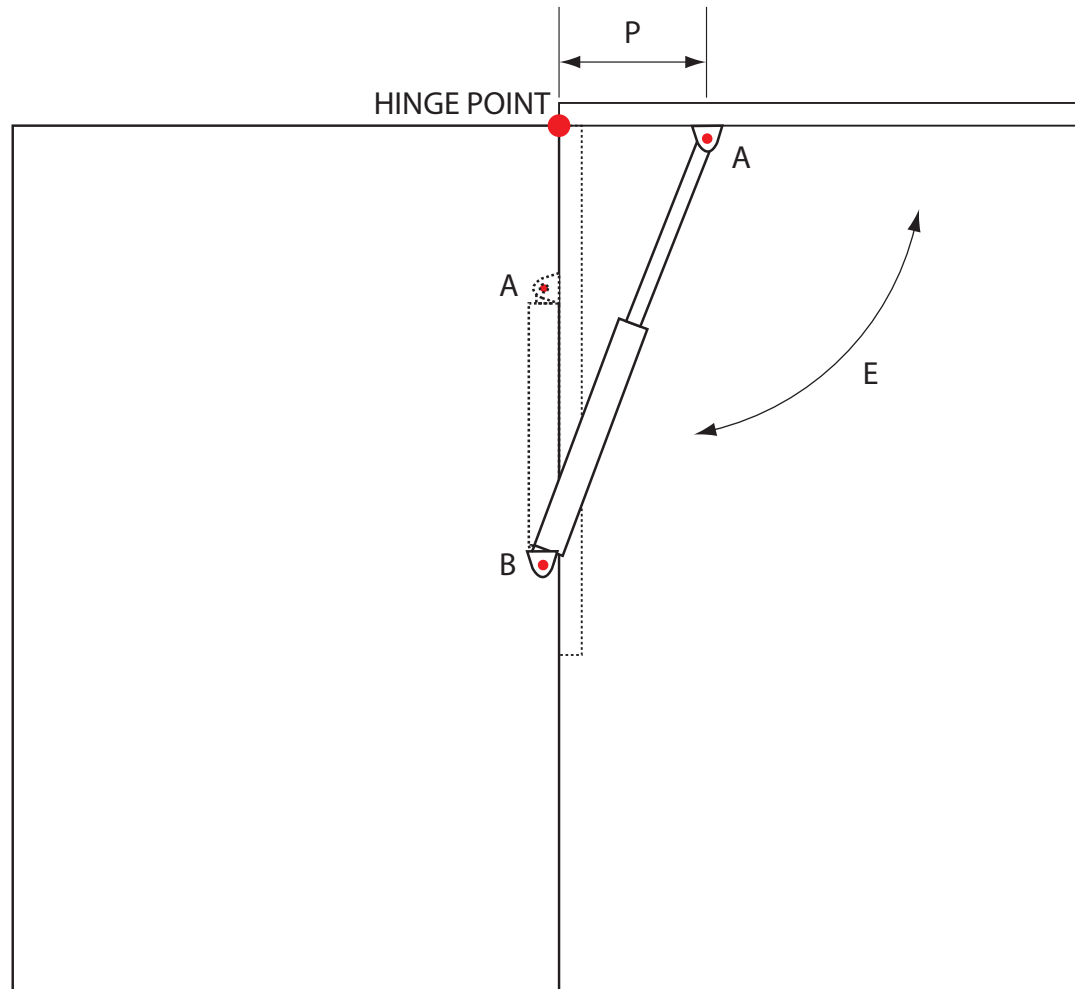

1. Fit **A** at distance **P** from **hinge point**

2. Lift the door to the correct position and fit **B** to the jamb with the stay fully extended

3. Gently lower the door and ensure it does not bind up

For best results ensure angle **E** is no greater than 90°

<i>Product code</i>	<i>P dimension (mm)</i>
1745	60
1735	195
1736	195
1740	200
1751	65
1755	65
1756	100
1757	150



Disclaimer: These plans and designs are concepts, accurate to the best of our knowledge. Dimensions and designs shown are based on actual working models, however do not constitute a specification. Co-Mac (PN) Ltd take no responsibility in any form whatsoever for the results of the use of these plans, and the user is recommended to conduct their own assessment of the designs, within the requirements of the application.

www.comac.co.nz

PH (06) 350-0015

PH 0800 33 55 22

105 Kaimanawa St

orders@comac.o.nz

FAX (06) 354-2662

FAX 0800 42 66 22

PALMERSTON NORTH 4440

© Co-Mac  
(PN) Ltd  
2017

