


105 Kaimanawa Street
P.O Box 4
Palmerston North
New Zealand

Telephone (06) 350-0015
Fax: (06) 354 2662

Co-Mac (PN) Ltd
Fitting Instructions for 2887

1. Fit A in position.
2. Fit B bracket on the door so the door bottom hangs down about 50mm from the top. Increase A-B for a higher door.
3. Fit C to the bottom of the door as low down as practical.
4. When the door is up, scribe a line using the D end of the door support bar.
5. When the door is down, scribe a line with the D end of the strut. Where the two lines meet fix the D end there.
6. Increase the C-D length lessens the amount the door comes out when it opens.
7. With the door in the up position fit the gas strut #1853.

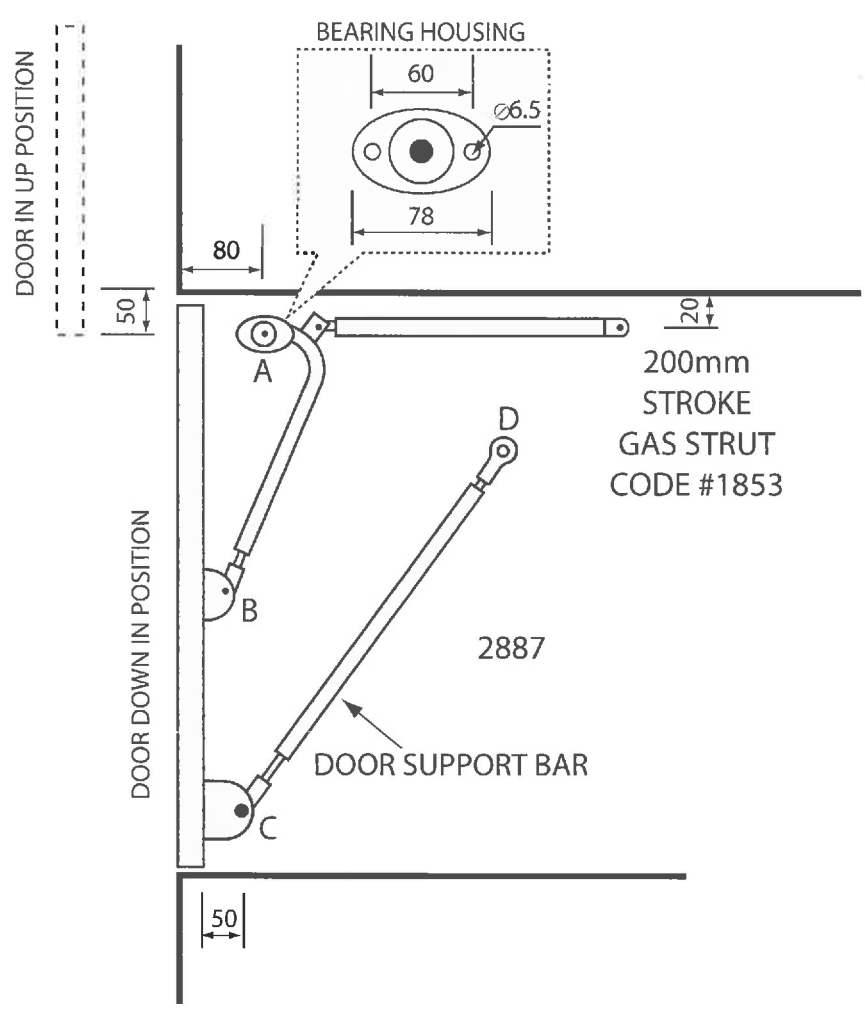

For Hard to Find Hardware

